

SK31 and SK75 Chamber *Installation Guideline*


Prior to installation of the chamber system, adequate attention to the following guidelines is required. In addition, the chamber supplier, chamber installer (site contractor), and the design engineer may meet for a pre-construction meeting to discuss any questions relating to the installation process and the guidelines herein.

1 Handling and Storage

- Upon arrival to the project site, visually inspect the chambers to ensure accurate quantities. Any damage that may have occurred during transport should also be noted at this time.
- For efficient shipping and to allow ease in handling and storage, the chambers are stacked neatly upon themselves and secured to a pallet. Unloading is best accomplished via forklift.
- Chambers should be stored in an area that is flat and free of debris. To avoid the potential for damage, this storage area should be isolated well away from the traveling paths used for construction vehicle traffic.

2 Foundation and Bedding Preparation

- Using the project plans and the appropriate details, excavate the chamber system bed in a manner to sufficiently accommodate the chambers and manifolds. To ensure an adequate fit and to allow for a stone border, an additional 12" of excavation is required between the trench sidewalls and the chamber system.
- If standing water is present, dewatering measures should be utilized.
- If a soft, unstable foundation is encountered, it should be over excavated and replaced with a suitable material as determined by the project engineer.
- Upon the prepared foundation, place a 6oz. nonwoven fabric on the bed bottom and up and along the sidewalls. Maintain a 24" overlap of fabric at all seams.
- Using the project plans and appropriate details, provide a level base of ¾"-2" clean crushed angular stone over the entire trench bed bottom. Foundation stone depth as indicated on the project plans (6" minimum). See Figure 1. Using a vibratory roller, compact the stone base to achieve a flat level surface.
- If specified on the project plans, the perimeter underdrain piping may be laid at this point.

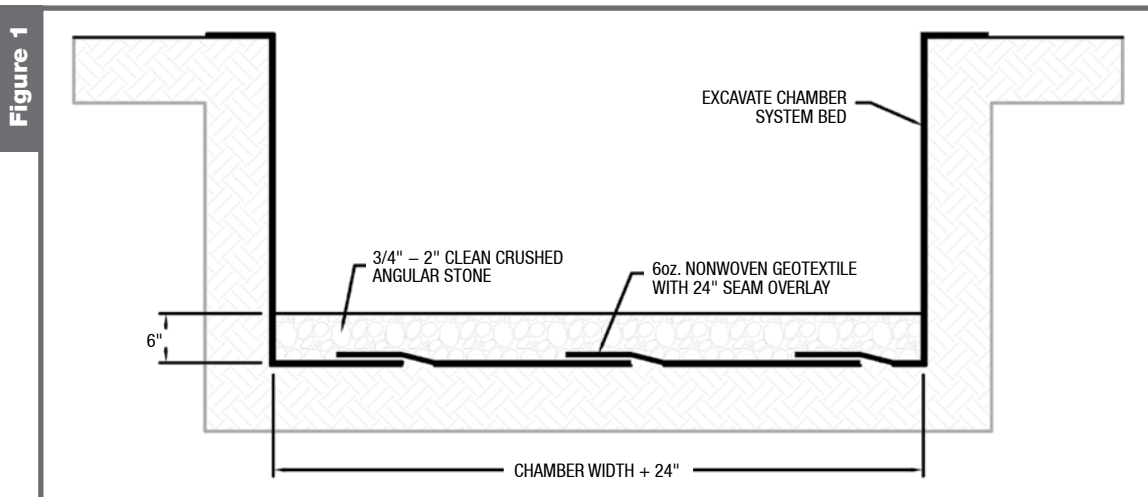

3 Manifold Assembly and Chamber Placement

- Using the project plans and appropriate details, fully assemble the manifold system.
- To alleviate the potential for scour at the inlet locations, lay a 15' wide strip of woven geotextile, along the entire length of the manifold mainline, adequately carpeting the bedding beneath the inlet locations. See Figure 2&3.
- Position the first chamber and end cap of each row with the inlet pipes. At the designated locations, core an opening in the end cap and insert the inlet pipe. The inlet pipes should penetrate 12" into the end cap. Repeat this process for each row.
- Maintaining a 6" minimum clear space between each row is required. The assembly of each row is achieved by over topping the last rib of the initial chamber with the first rib of the succeeding chamber. Overlap locations are labeled on each chamber. Row assembly should not exceed the reach of the backfill placement equipment. The final chamber of each row shall also be equipped with an end cap.
- Endcaps are placed with the endcap overlapping the top of the reduced size joining corrugation.

Figure 2

SCOUR PROTECTION - WOVEN GEOTEXTILE


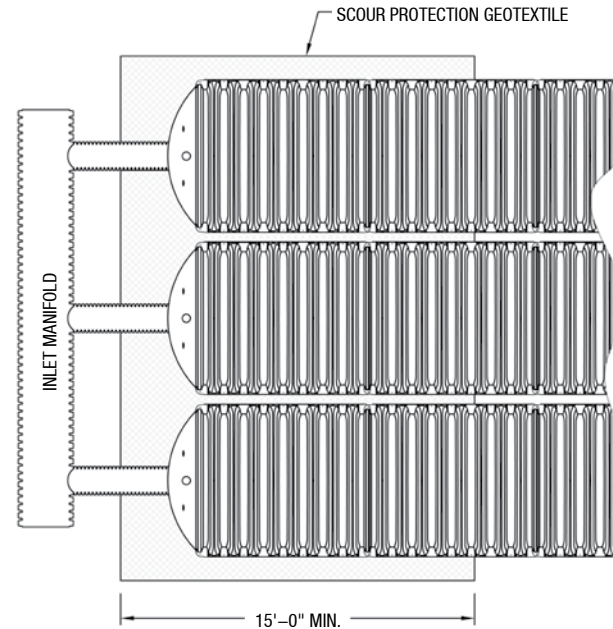


Figure 3

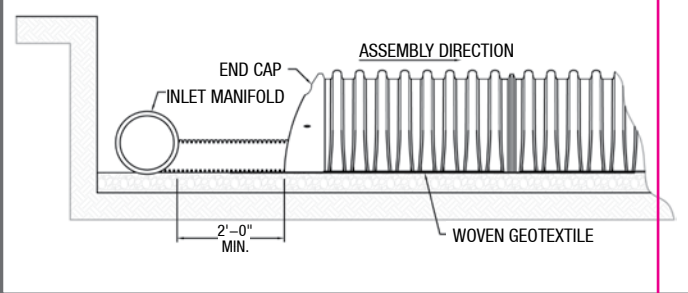


4 Inspection Port Placement

- Each chamber crown is equipped with one circular cut out point to accommodate the vertical inspection port riser. Using the project plans, identify which chambers should be fitted with inspection ports. Using a reciprocating saw, cut out the 4" diameter opening at the appropriate location. Insert a Tap-Tee or equal into the opening.
- Utilizing 4" PVC Sch. 40 pipe and fittings, build the inspection port as shown in Figure 4.

Figure 4


INSPECTION PORT

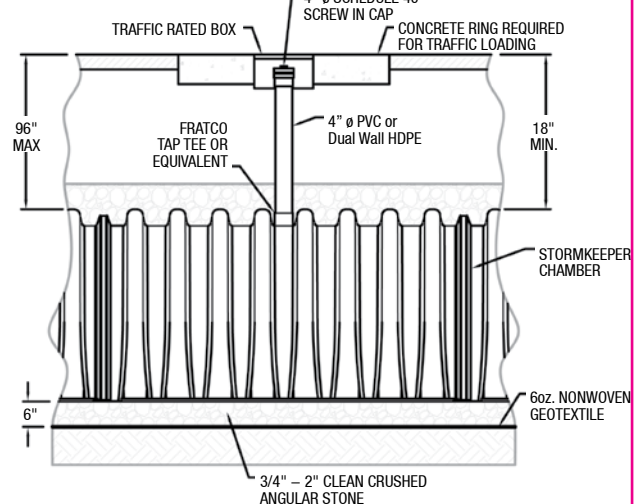

5 Chamber Backfill Process

- Backfill material used for embedment/anchoring and for surrounding areas will be $\frac{3}{4}$ "-2" particle size, clean, crushed angular stone.
- Placement of backfill material for embedment and surrounding areas is best accomplished by using the long reach of an excavator or stone shooter/conveyor system. **No construction equipment shall be situated atop of the chamber system.**
- In order to prevent chamber shifting and to maintain row spacing, carefully deposit the stone evenly along the centerline of the chamber, allowing the stone depth between the rows to rise equally. During this phase, stone height between rows should not differ by more than 12" at any time.
- After this initial anchoring phase is complete, stone placement may continue to surround the chambers and around the perimeter. Stone should fully encompass the chambers and should cover the top of the chamber crown to a minimum height of 6".
- Small light weight tracked dozers with ground pressure less than 1100 lbs/sf may be used at this point to finalize the grading of cover stone. Stone must be pushed parallel to rows at all times. **Wheel and Roller Loads Not Allowed.**
- Cover the entire top of the stone bed with a layer of 6oz. Non-Woven fabric. Overlap all seams 24". Utilizing excavator positioned off bed, place initial backfill. Begin compaction at 12". Roller to travel parallel with rows.

Figure 5

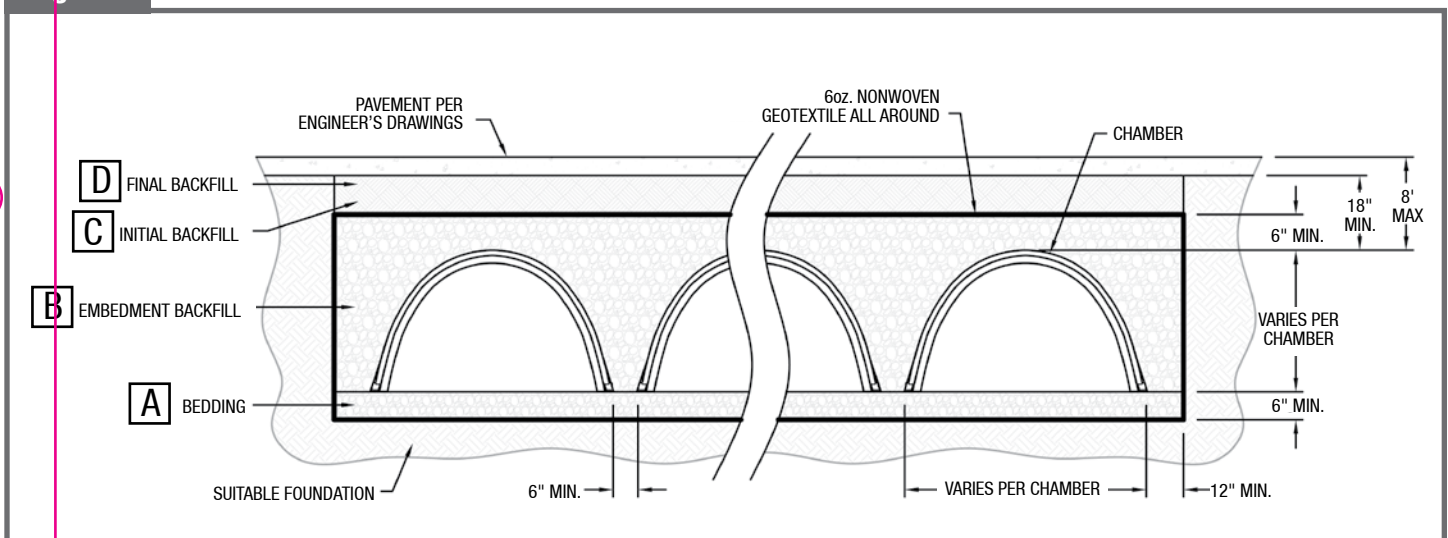

The SK75 can store
75 cubic feet per chamber.

The SK31 can store
31 cubic feet per chamber.



Table 1	Fill Material Location	Material Description	AASHTO M43 Designation	Compaction Requirements
	[D] Final Backfill Fill material for Layer D starts at the top of the C layer to the bottom of the pavement or to the finished grade of an unpaved surface. The pavement subbase may be part of the final backfill.	Any backfill which provides adequate subgrade for the project per the engineer's plans. Plans shall indicate subgrade requirements.	N/A	Subgrade will be placed and compacted to the requirements as shown on the site plans.
	[C] Initial Backfill Material for layer C starts at the top of the embedment zone (layer B) and continues to 18" above the top of the chamber. The pavement subbase may be part of the initial backfill layer	Well graded granular material, <35% fines.	AASHTO M45 A-1, A-2, A-3 or AASHTO M43 3, 357, 4, 467, 5, 56, 57, 6, 67, 68, 7, 78, 8, 89, 9, 10	Compaction will not begin until a minimum of 12" of material is placed over the chambers. Additional layers shall be compacted in 6" lifts to a minimum of 95% standard proctor density for well graded material. Roller gross vehicles are not to exceed 12,000 lbs. and dynamic force not to exceed 20,000 lbs.
	[B] Embedment Stone Embedment stone will surround the chambers and extends from the top of the bedding stone (layer A) to the bottom of the fabric layer.	3/4" to 2" clean crushed angular stone.	3, 357, 4, 467, 5, 56, 57	No compaction required
	[A] Bedding Stone Bedding Stone extends from the subgrade to the foot of the chambers.	3/4" to 2" clean crushed angular stone.	3, 357, 4, 467, 5, 56, 57	Placed in 6" lifts and compacted with a vibratory roller.

6 Construction Loading

Refer to Table 2 for maximum allowable construction vehicle loads.

Table 2	Material Location	Fill Depth above chambers	Max Allowable Wheels Loads		Max Allowable Track Loads		Max allowable roller loads
			Max Axle Load for Trucks	Max Wheel Load for Loaders	Track Width	Max Ground Pressure	Max Drum Weight Dynamic Force
	[D] Final Fill Material	in. 36" Compacted	lbs. 32,000	lbs. 16,000	in. 12" 18" 24" 30" 36"	psf 3420 2350 1850 1510 1310	lbs. 38,000
	[C] Initial Fill	24" Compacted	32,000	16,000	12" 18" 24" 30" 36"	2480 1770 1430 1210 1070	20,000
		24" Dumped	32,000	16,000	12" 18" 24" 30" 36"	2245 1625 1325 1135 1010	20,000 Gross weight of roller not to exceed 12,000 lbs.
		18"	32,000	16,000	12" 18" 24" 30" 36"	2010 1480 1220 1060 950	20,000 Gross weight of roller not to exceed 12,000 lbs.
	[B] Embedment Zone	12"	16,000	Not Allowed	12" 18" 24" 30" 36"	1540 1190 1010 910 840	20,000 Gross weight of roller not to exceed 12,000 lbs.
		6"	8,000	Not Allowed	12" 18" 24" 30" 36"	1070 900 800 760 720	Not Allowed